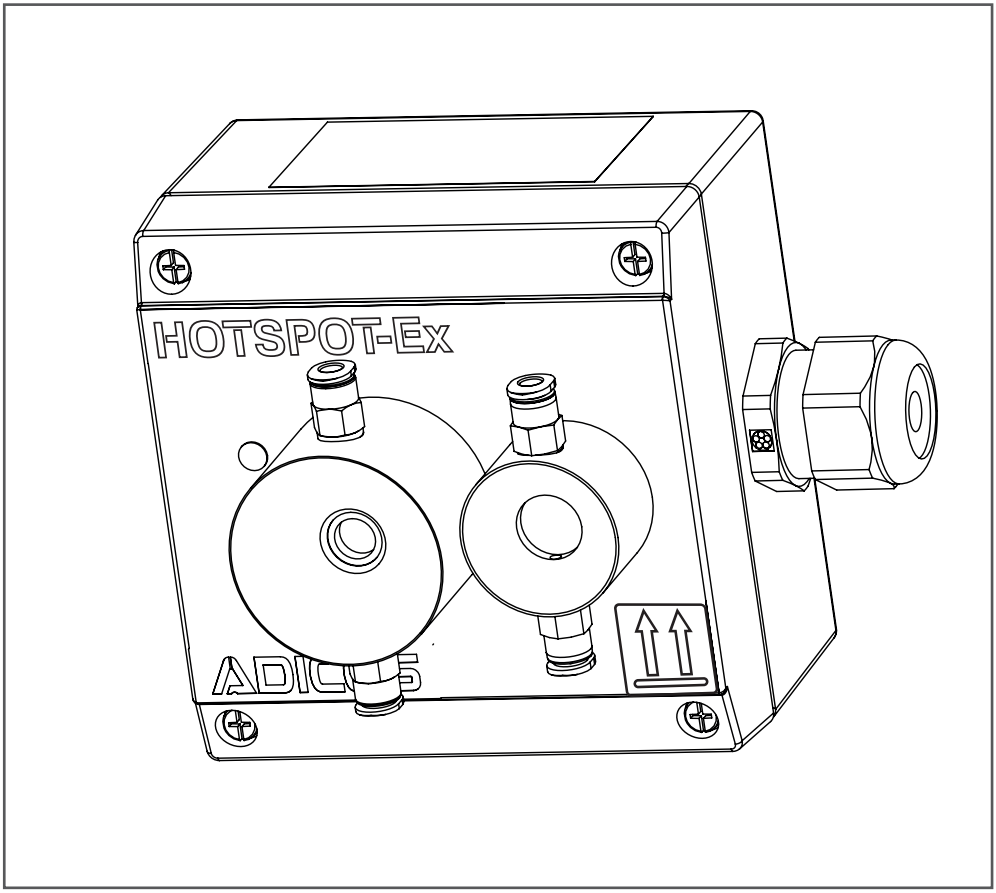

EN CE IP65

Supplementary Instruction Manual for HOTSPOT-Ex

IR Heat Detector

GTE Industrieelektronik GmbH | Helmholtzstr. 21, 38 – 40 41747 Viersen | Germany | +49 2162 3703-0 | info@gte.de

Supplementary Instructions for ADICOS HOTSPOT-Ex
Article number: 410-8350-001-EN-03
Release date: 20.11.2024

– Translation –

Manufacturer:
GTE Industrieelektronik GmbH
Helmholtzstr. 21, 38-40
41747 Viersen
GERMANY

Support hotline: +49 2162 3703-0
E-Mail: support.adicos@gte.de

© 2024 GTE Industrieelektronik GmbH – This document and all figures contained may not be copied, changed, or distributed without explicit approval by the manufacturer!

Subject to technical changes!

ADICOS® and HOTSPOT® are registered trademarks of GTE Industrieelektronik GmbH.

Abstract

The Advanced Discovery System (ADICOS®) is used for early detection of fires in industrial environments. It is comprised of various, separate detector units. By parameterizing and arranging the detectors appropriately, the system fulfills a predefined detection goal. The ADICOS system ensures reliable early detection of embers and smoldering fires even in adverse environments.

The detectors of the HOTSPOT product series are equipped with thermal imaging sensors and use infrared measurement technology and intelligent signal analysis to detect all types of smoldering fires and open fires, even in the incipient stage. The fast response speed of 100 milliseconds enables the monitoring of conveyor belts or other conveyor systems, e.g. on moving embers.

ADICOS HOTSPOT-Ex detectors are designed for operation within explosive atmospheres up to ATEX zone 20.

Table of Content

1 About this Manual 5
1.1 Objective. 5
1.2 Explanation of Symbols 5
1.3 Storing the Manual 5
2 Safety Instructions 6
2.1 Intended Use 6
2.2 Standards and Regulations 6
2.3 Personnel Qualification 7
2.4 Handling Electrical Voltage 7
2.5 Modifications 7
2.6 Accessories and Spare Parts 7
3 Structure 8
3.1 Overview. 8
3.2 Cable Assignment 9
4 Installation 10
4.1 Mounting on Mounting Plate. 10
4.2 Mounting on Mounting Bracket 11
4.3 Wiring 12
5 Commissioning 12
6 Operation 12
7 Maintenance 12
8 Disposal 13
9 Technical data 13
9.1 ID Plate 15
10 Appendix 16
10.1 ADICOS Mounting Plate 16
10.2 ADICOS Mounting Bracket 17

1 About this Manual

1.1 Objective

This manual describes the special requirements on installation, wiring, commissioning, and operation of ADICOS HOTSPOT-Ex detectors for explosive atmospheres up to ATEX zone 20. They are exclusively addressed to knowledgeable specialist personnel (→ Chap. 2, Safety instructions).

1.2 Explanation of Symbols

This manual features a continuous structure for best possible comprehension. The following labels are used.

Warning signs

The following types of notes are used through this manual.

DANGER!
This combination of symbol and signal word indicates an immediately dangerous situation that will lead to death or severe injuries if not avoided.

WARNING!
This combination of symbol and signal word indicates a possibly dangerous situation that could lead to death or severe injuries if not avoided.

Explosion protection
This information type signals measures that must be implemented for maintaining the Explosion protection.

Tips and recommendations
Helpful tips and recommendations as well as information to ensure efficient and uninterrupted use.

1.3 Storing the Manual

Store this manual easily reachable and in direct vicinity of the detector system to enable use as needed.

2 Safety Instructions

ADICOS HOTSPOT-Ex detectors for explosive atmospheres up to ATEX zone 20 ensure operational safety assuming proper installation, commissioning, operation, and maintenance. For this purpose, it is absolutely required to completely read, understand, and follow this manual and the safety information contained.

WARNING!
Personal injury and property damage!
Incorrect installation and operating errors can cause death, serious injury and damage to industrial equipment.

- **Read the entire manual and follow the instructions!**

Explosion protection
When using ADICOS detectors in potentially explosive atmospheres, follow the specifications of the ATEX operating directive.

2.1 Intended Use

ADICOS HOTSPOT-Ex are designated for the detection of fire scenarios in explosive atmospheres of ATEX zone 20, 21 and 22. In this context, the operating parameters described in Chap. 9, »Technical Data« must be met. Any deviating use requires prior consultation with the manufacturer.

Compliance with this manual as well as all applicable country-specific provisions is also part of the intended use.

2.2 Standards and Regulations

The safety and accident prevention regulations applicable for the specific application must be observed during detector installation, commissioning, maintenance, and test.
The following standards and directives in their current version are of particular importance when handling potentially explosive atmospheres:

Standards and Regulations	Description
EN IEC 60079-0:2018/ AC: 2020-02	Explosive atmospheres - Part 0: Equipment - General requirements
EN 60079-31:2014	Explosive atmospheres - Part 31: Equipment dust ignition protection by enclosure „t“
EN 60529	Degrees of protection provided by enclosures (IP Code)
2014/34/EU	ATEX product directive (about equipment and protective systems intended for use in potentially explosive atmospheres)
1999/92/EG	ATEX operating directive (on safety and health protection of workers potentially at risk from explosive atmospheres)

2.3 Personnel Qualification

Any work on ADICOS HOTSPOT-Ex may only be performed by qualified personnel. Persons, who can perform work on electrical systems and recognize possible dangers based on their professional education, knowledge, and experience as well as knowledge of the applicable provisions, are considered qualified personnel.

WARNING!
Personal injury and property damage!
Improperly performed work on and with the device can lead to malfuctions.

- **Installation, startup, parameterization and maintenance may be performed only by authorized and properly trained personnel.**

2.4 Handling Electrical Voltage

DANGER!
Risk of explosion by electrical voltage in potentially explosive atmospheres!
The electronics of ADICOS HOTSPOT-Ex detectors requires an electrical voltage that can trigger an explosion in potentially explosive atmospheres.

- **Do not open enclosure!**
- **De-energize the entire detector system and secure against unintentionally reactivation for all wiring work!**

2.5 Modifications

WARNING!
Property damage or detector failure by any form of unauthorized modification!
Any form of unauthorized modification or extension can lead to a failure of the detector system. The warranty claim expires.

- **Never make unauthorized modifications on your own authority.**

2.6 Accessories and Spare Parts

WARNING!
Property damage due to short circuit or failure of the detector system
The use of parts other than the manufacturer's original spare parts and original accessories may result in property damage due to short circuits.

- **Only use original spare parts and original accessories!**
- **Original spare parts and accessories may only be installed by trained specialist personnel.**
- **Qualified personnel are persons as described in Chap. 2.3.**

3 Structure

3.1 Overview

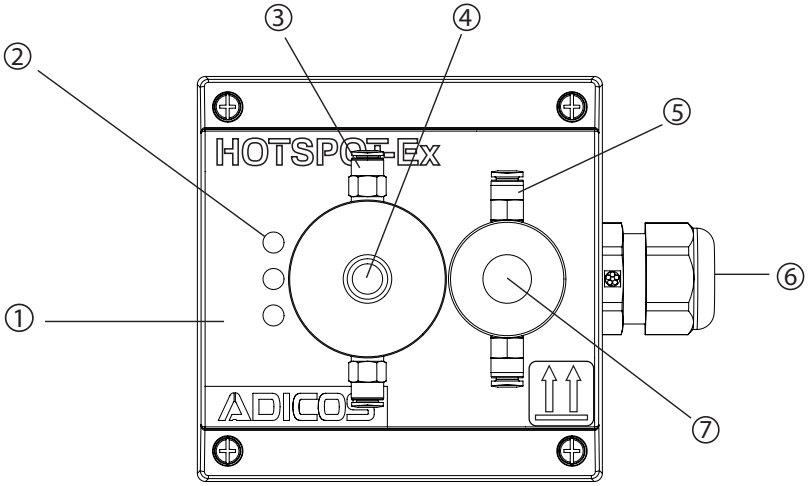

No.	Description
①	Enclosure
②	Display elements
③	Purge air adapter IR-Sensor
④	IR-Sensor
⑤	Purge air adapter camera
⑥	Explosion Proof cable gland
⑦	Camera

3.2 Cable Assignment

12-pin cable OELFLEX 415CP

Wire	Signal	Limit value contact
1	Operating voltage DC 21.6 ... 40 V non-polarised	
2		
3	M-Bus max. 40 V non-polarised	
4		
5	Relay output X6 e	Alarm NO[1]
6	Relay output X6 a	Alarm NO[1]
7	Relay output X7 a	Fault NC
8	Relay output X7 e	Fault NC

[1] with series resistor

Option analog signal

Wire	Signal	Analog signal
9	Analog current	4 ... 20 mA
10	Analog current	4 ... 20 mA
11		
12		

Option Fire panel interface

Wire	Siemens FDnet	Bosch LSNi
9	FDnet-A (-)	LSN b1 in
10	FDnet (+)	LSN a in
11	FDnet-B (-)	LSN b2 out
12	FDnet (+)	LSN a out

Option pre-alarm

Wire	Auxiliary relay
9	–
10	–
11	Common
12	Normally open

4 Installation

4.1 Mounting on Mounting Plate

WARNING!
Risk of explosion in hazardous areas due to electrical voltage.
ADICOS HOTSPOT-Ex detectors must be mounted with closed enclosure.

- **Do not open enclosure!**
- **Use ADICOS mounting plate!**

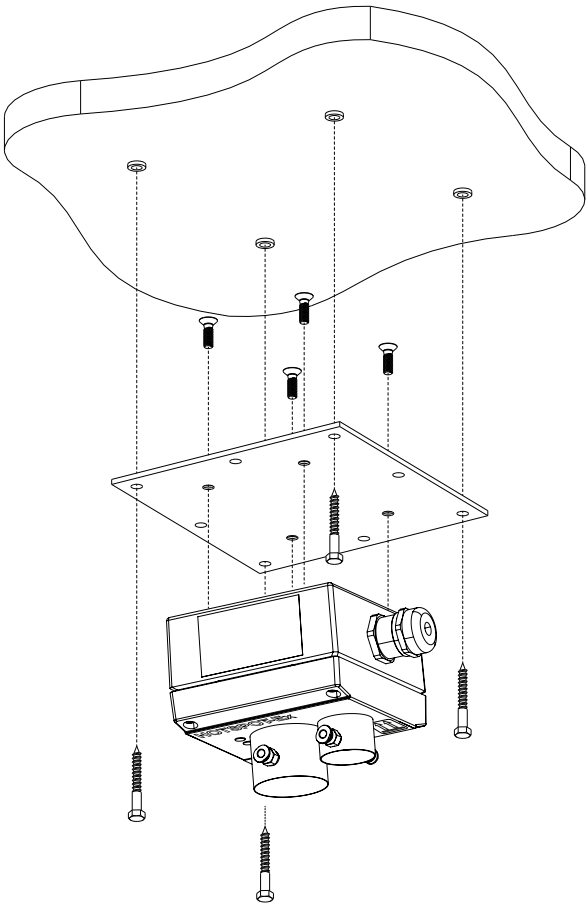

4.2 Mounting on Mounting Bracket

WARNING!
Risk of explosion in hazardous areas due to electrical voltage.
ADICOS HOTSPOT-Ex detectors must be mounted with closed enclosure.
- **Do not open enclosure!**
- **Use ADICOS mounting foot!**

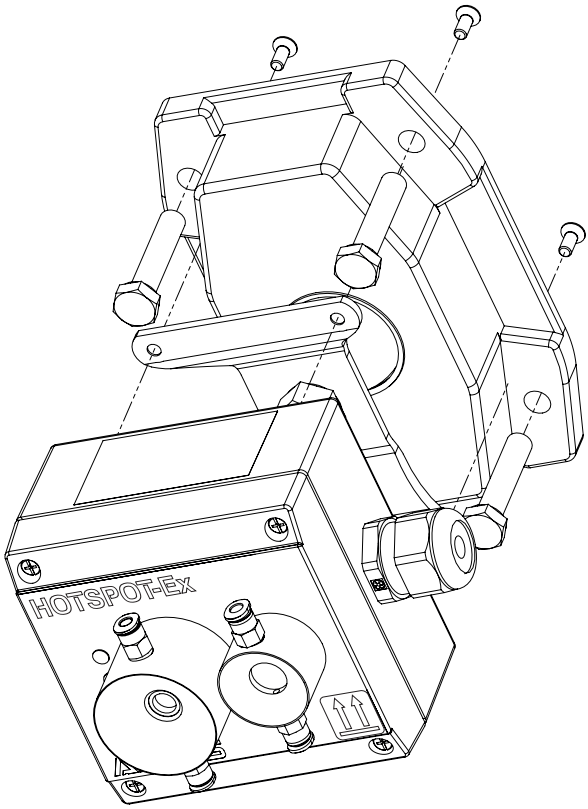

4.3 Wiring

Wiring according to chapter 3.2.

DANGER!
Risk of explosion in hazardous areas due to electrical voltage.
The electronics of the ADICOS HOTSPOT-Ex detectors requires an electrical voltage that can trigger an explosion in potentially explosive atmospheres.

- **Do not open enclosure!**
- **De-energize the entire detector system and secure against unintentionally reactivation for all wiring work!**
- **In the case of wiring within potentially explosive atmospheres, only use explosion-proof junction boxes with respective approval!**
- **Do not bend connection cable! Observe minimum bending radius! (–› Chap. 9, Technical Data)**

5 Commissioning

DANGER!
Risk of explosion in hazardous areas due to electrical voltage.
The electronics of the ADICOS HOTSPOT-Ex detectors requires an electrical voltage that can trigger an explosion in potentially explosive atmospheres.

- **Prior to switching on, check that all detectors are properly mounted and wired!**

6 Operation

DANGER!
Risk of explosion in hazardous areas due to electrical voltage.
The electronics of the ADICOS HOTSPOT-Ex detectors requires an electrical voltage that can trigger an explosion in potentially explosive atmospheres.

- **Never open the enclosure or loosen the cable gland during operation!**

7 Maintenance

DANGER!
Risk of explosion in hazardous areas due to electrical voltage.
The electronics of the ADICOS HOTSPOT-Ex detectors requires an electrical voltage that can trigger an explosion in potentially explosive atmospheres.

- **Do not open enclosure!**
- **De-energize the entire detector system and secure against unintentionally reactivation for all wiring work!**
- **Replace the closed detector including connection cable only!**

8 Disposal

Return the device to the manufacturer when it reaches the end of its serviceable life. The manufacturer will ensure that the components are disposed of properly, in an environmentally friendly manner.

9 Technical data

General		
Model		ADICOS HOTSPOT-Ex
Item No.		410-2001-235 | 410-2001-236
Enclosure dimensions	mm	128 x 100 x 90 (Length x Width x Depth) (Length: cable gland included)
Weight (incl. 10 meter cable)	kg	2.3
Degree of protection		IP 65
Enclosure		Aluminum die casting, powder-coated
Electrical properties		
Voltage range	V	DC 21.6 ... 40
Max. Power consumption (excl. heating)	VA	2
Max. Power consumption: (incl. heating)	VA	10
M-Bus-Voltage (Signal)	V/mA	max. 40 V non-polarized / max. 30 mA
Thermal data		
Ambient t ≤ 95 (nicht kondensierend) emperature	°C	–10 ... + 50
Relative humidity	%	≤ 95 (non-condensing)
Optional communication modules (input parameters)		
BMZ-Modul Siemens FDnet		DC 33 V; max. 10 mA
ADICOS Coupling module 4-20 mA		DC 35 V; max. 20 mA
BMZ-Modul Bosch LSN		DC 36 V; max. 20 mA
Pre-alarm relay module		DC 40 V; max. 10 mA DC 24 V; max. 20 mA

Sensor data		
Resolution	Pixel	32 x 31
Capture angle	°	60 x 58 | 93 x 92
Reaction time	s	< 1
Temporal resolution	s	0.1 or 1 (depending on configuration)
Information regarding explosion protection		Certified according to ATEX and IECEx
Explosion protection class BVS 15 ATEX E102		II 1D Ex ta IIIC T110°C Da II 2D Ex tb IIIC T80°C Db
Explosion protection class IECEx BVS 15.0089		Ex ta IIIC T110°C Da Ex tb IIIC T80°C Db Ex tc IIIC T80°C Dc
Device group (ATEX)		II, category 1D/2D
Other		
Bending radius cable	mm	> 91.5

9.1 ID Plate

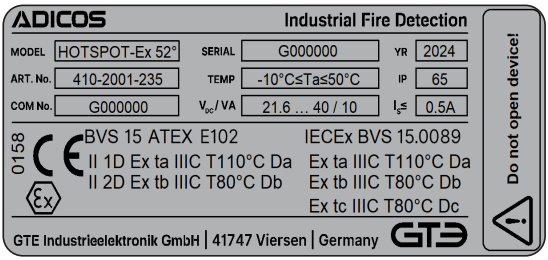

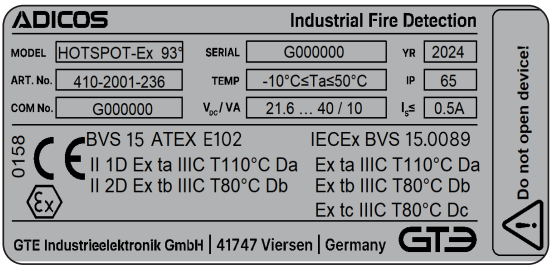

Model	Device model	SERIAL	Serial number (variable)	YR	Year of production (variable)
ART. No	Article number (variable)	TEMP	Ambient temperature	IP	Degree of protection
COM No.	Communication number (variabel)	V_{DC}/VA	Voltage range / maximum power consumption (heating incl.)	I_s	Internal fusing (Short-circuit current)
	CE marking		Information on explosion protection		

10 Appendix

10.1 ADICOS Mounting Plate

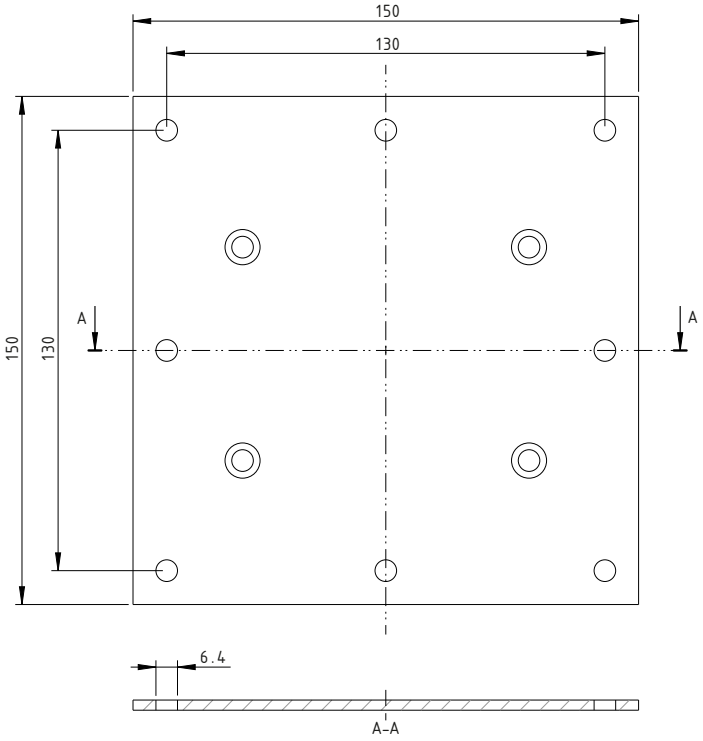
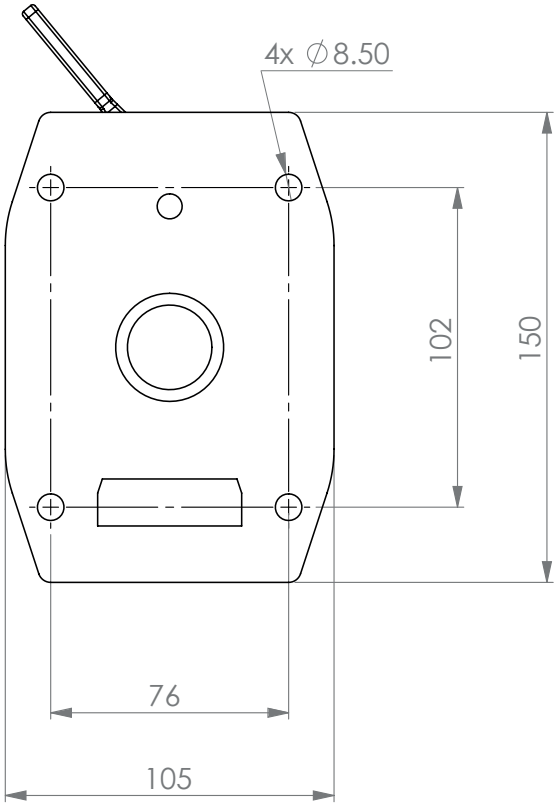
10.2 ADICOS Mounting Bracket